


# DIFFERENTIAL LOCK

## System Description

The differential lock operates only in 4WD.

The differential lock control unit interrupts current flowing through differential lock solenoid-2 when vehicle speed exceeds 7 km/h (4 MPH). If the differential lock switch is accidentally turned on when vehicle speed is greater than 7 km/h (4 MPH), the control unit will prevent the differential lock from sustaining impact damage.

A warning buzzer will sound when the vehicle is driven over 20 km/h (12 MPH) with the differential lock engaged.

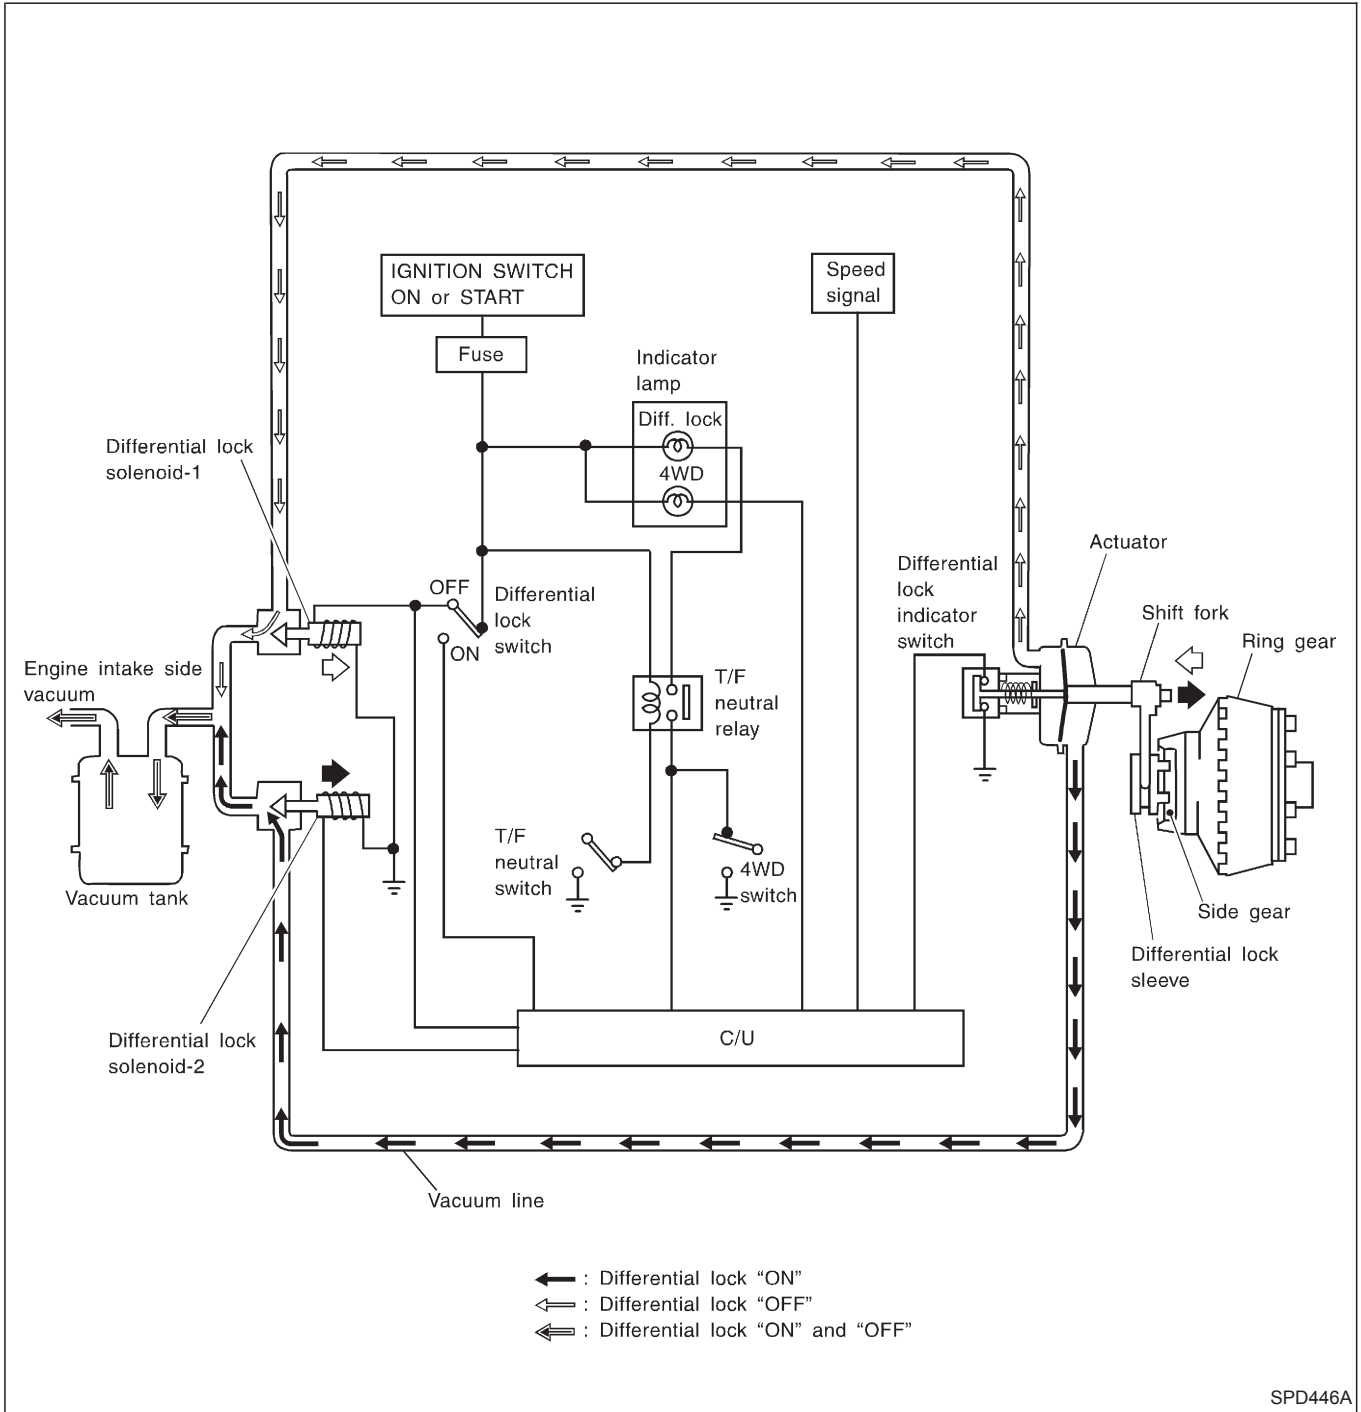

# DIFFERENTIAL LOCK

## Component Parts Location

